

## **Lounge LG Smart TV & Magic Remote Guide**

Your LG Smart TV is paired with the LG Magic Remote, designed to make navigation effortless with AI features, voice control, and intuitive point-and-click functionality.

### **Getting Started**

- Central black button: Use the thumb wheel to activate the on-screen cursor. Point the remote at the screen to move the cursor, and press the button to select.
- Directional ring: Surrounding the central button, this allows you to move the highlighted selection up, down, left, or right.

### **Home & Apps**

- Home button: Tap the button with the house symbol to view the Home screen and access available apps.
- App shortcuts: Dedicated buttons for Netflix, Prime Video, and other popular apps are located on the remote.

### **Watching TV**

- Use the number keys or the right-hand rocker switch to browse channels. The English channels start from channel 1.
- Volume control: Adjust sound using the left-hand rocker switch.

## **Using the Sony Disc Player with the LG Smart TV**

### **Starting the Disc Player**

- Turn on the TV. Power the Disc Player: Press the right-hand switch on the Sony Disc Player. A green light will appear.
- Insert a Disc: Press the left-hand switch to open the disc tray. Place your disc in the tray. Press the same button again to close the tray.

### **Navigating with the LG Magic Remote**

- Press the button above the blue key to show input options. Use the remote to select Sony DVD.
- Press the button with three dots (located to the right of the “0” key) to bring up the on-screen menu. Use this button to navigate disc options.

## Master Bedroom LG Smart TV

The wall mounted LG Smart TV in the master bedroom offers a wide range of online entertainment.

### Available Services

**Streaming & Apps:** Access Netflix, Prime Video, Spotify, the Internet, and other online services.

Please note: Satellite TV channels are not available on this TV.

### Using the Remote

On the middle row of the LG remote, you'll find three white buttons. Press the middle button (with the Home  symbol) to view all available apps and services. Press the Back button to close menus or return to the previous screen.

Use the arrow keys to navigate and the OK button to select.